



Infection may occur around an implant in the days after surgery or many years later. Both infections are difficult to treat, complicated by the bacteria that form, and may require removal of the implant to pack the space with antibiotics.





DEVICES, LLC


MOBILE DISRUPTION DEVICE™

MOBILE DISRUPTION DEVICE™




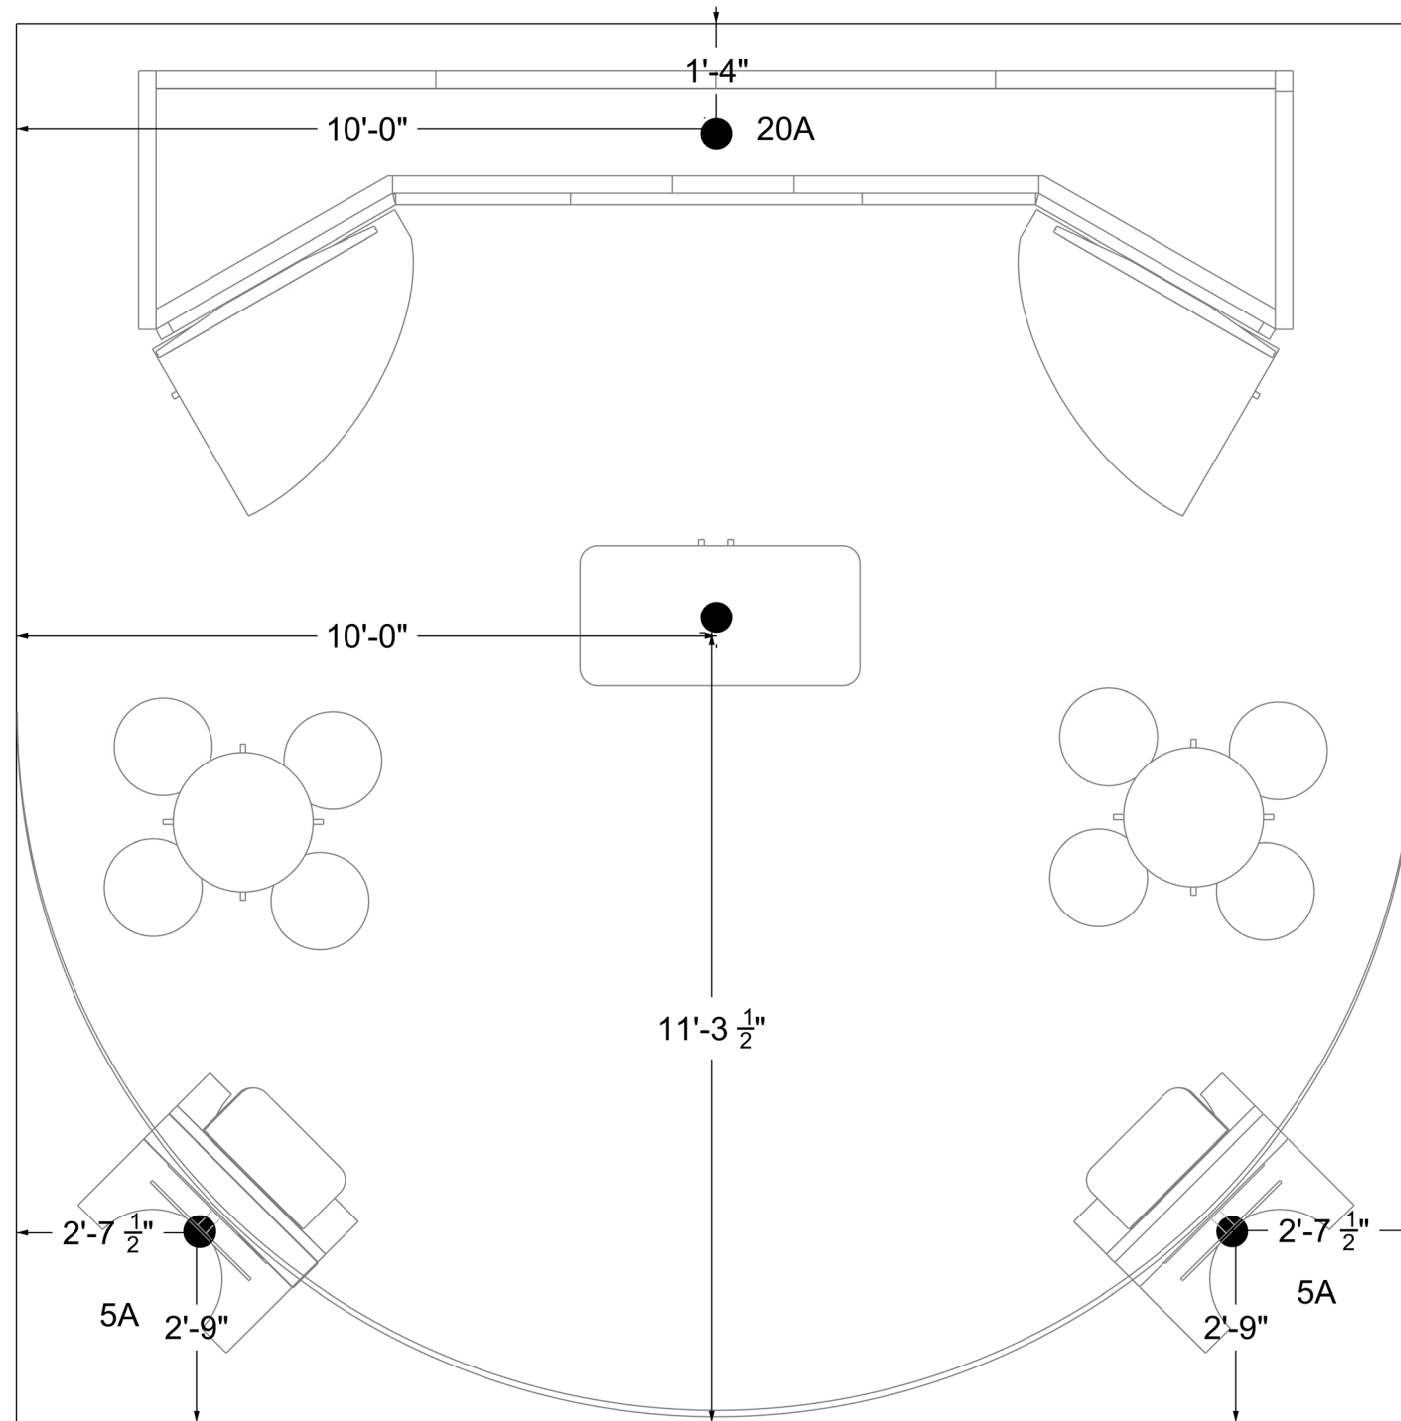

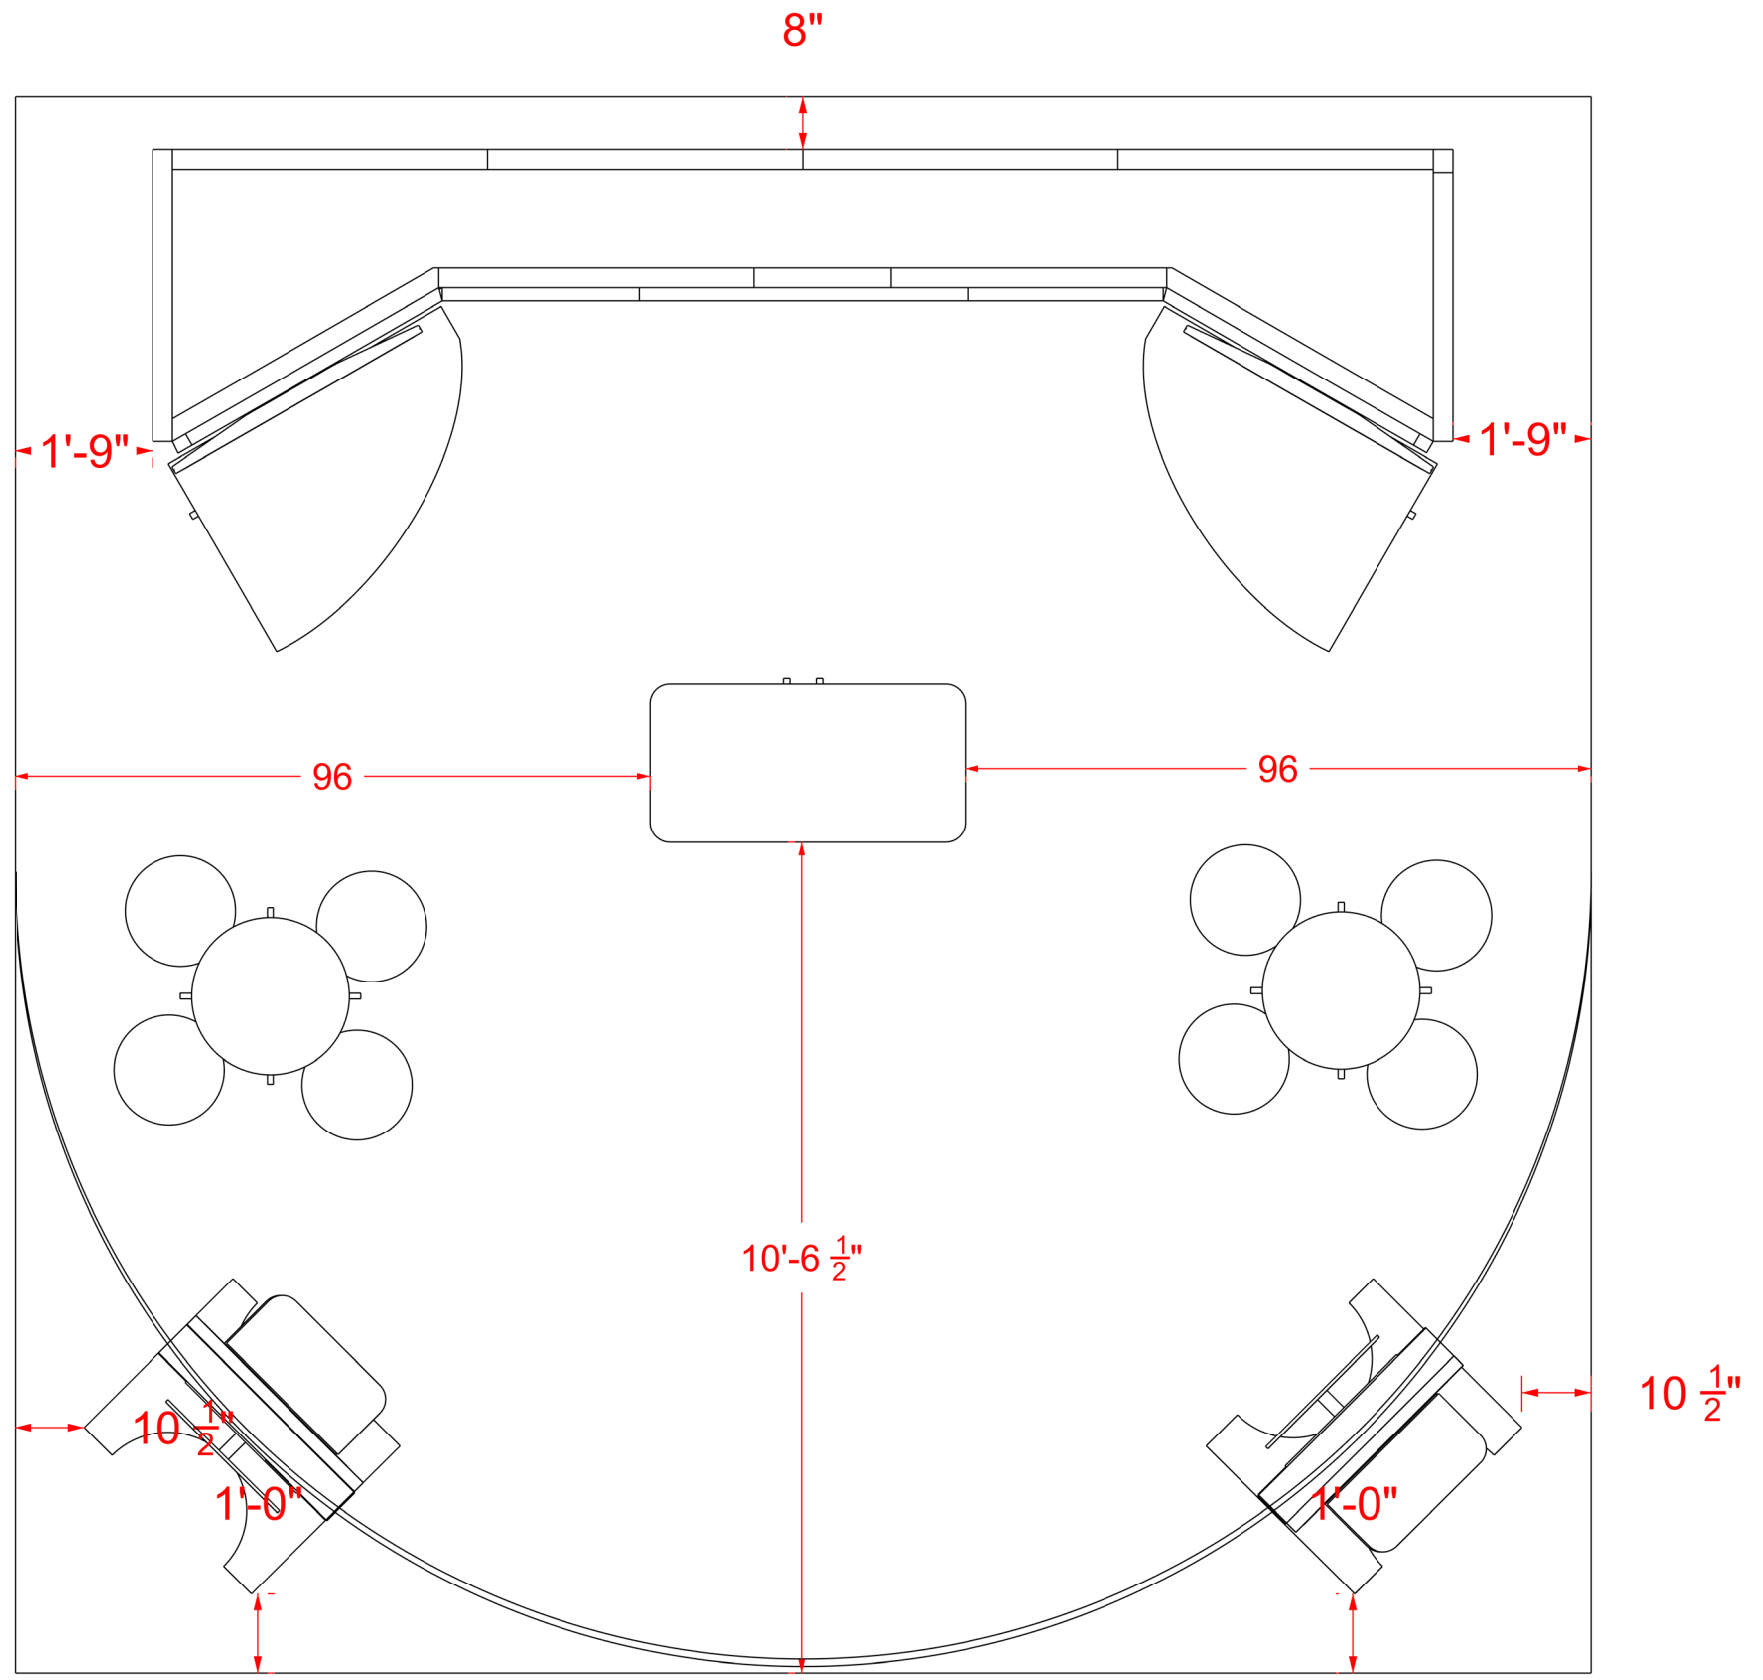


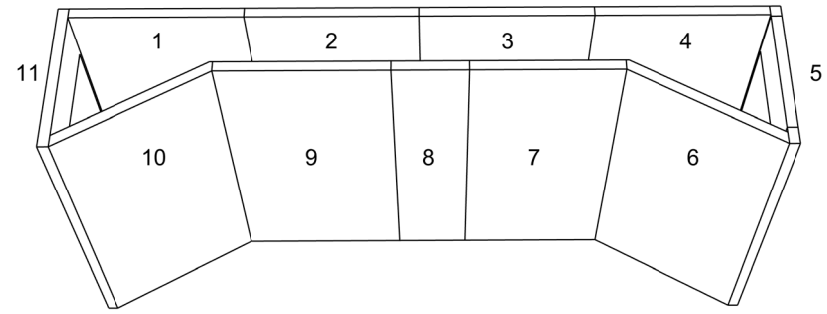


1. ATTACH PANELS (EACH PANEL IS NUMBERED ON THE BACK) ACCORDING TO THE ABOVE DIAGRAM

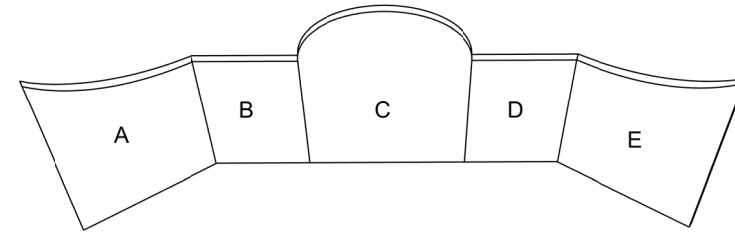


3. LIFT DISPLAY WALL PIECES UP AND ONTO THE WOOD SLATS.

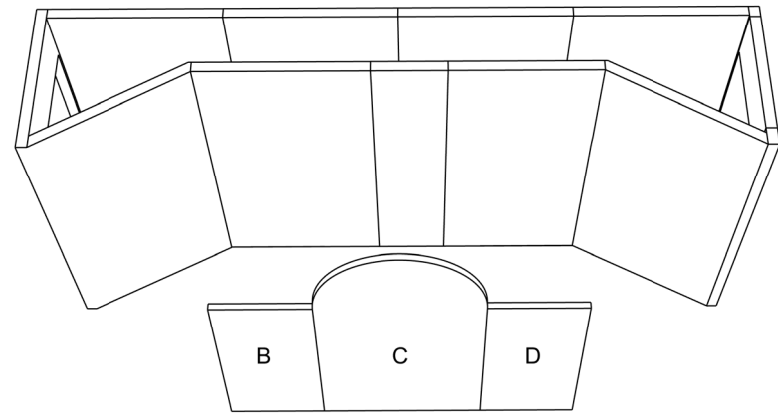


4. B, C, and D bolt together

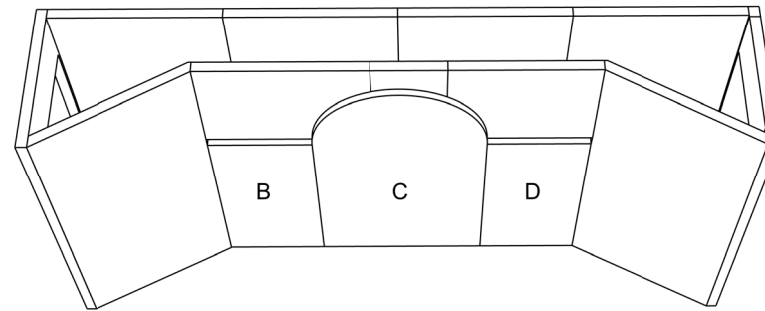


5. B, C, and D - V block to wall

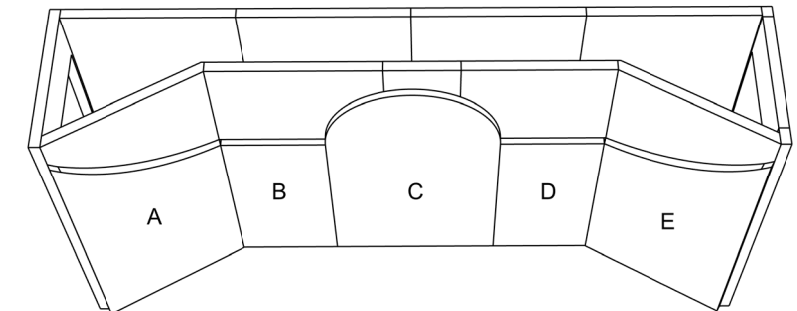

6. A and E V block to wall. Attach cords before mounting to wall.

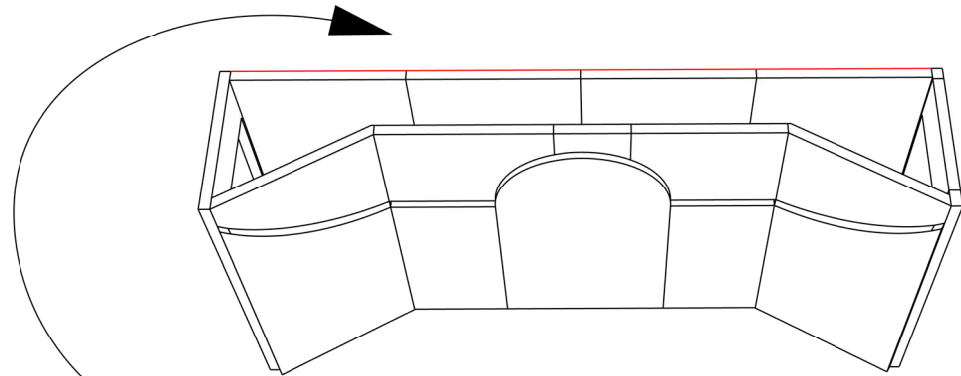

7. ATTACH SEG GRAPHIC TO BACK OF BOOTH

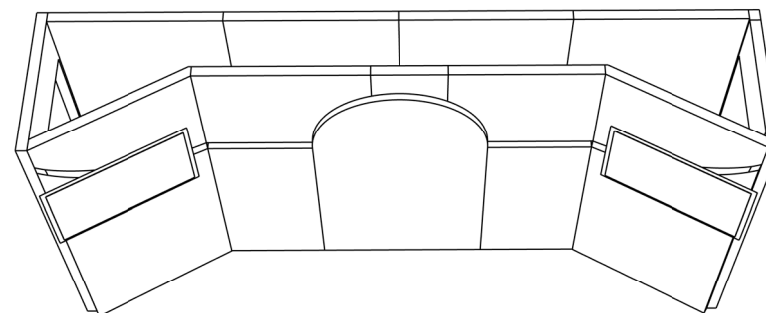

8. MOUNT TVS, PLUG IN LIGHTS

